


A tenant's guide to Electric Showers – Mira Jump

Quick-start guide

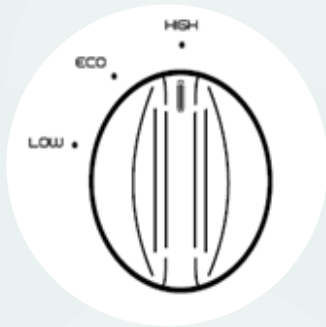

Low - For a cold shower.
ECO - For a warm shower during the warmer/summer months.
High - For a warm shower in the winter/colder months



Adjust the water temperature by turning the control as necessary. Be careful when altering the temperature.



Turn the shower on and off by pressing the stop/stop button. Allow 15-20 seconds for the water to get to temperature and check it's right before getting in the shower.

Seasonal changes

The temperature of the cold mains water supply is generally colder during the winter months. This means the dial may need to be set higher (or the 'High' setting selected) in winter to meet your desired temperature.

Cleaning the shower

Isolate the power to the shower before cleaning. The showerhead and hose should be kept clean and free from blockage to ensure it works correctly. Use a soft cloth to wipe away any limescale from the nozzles on the headset. Please be careful as many households cleaning product can damage plastics.

IMPORTANT - Please be aware that it is important not to carry out any unauthorised alterations to shower units, including replacing the head and hose sets. This will void the warranty and may cause the shower to fail.