

Heating Controls

- Integral Timer

The boiler in this property has a timer which you can set at 15 minutes intervals (shown to the right-hand side of the front cover of a boiler in the picture below).

This will send power to the room stat to bring the central heating on if the temperature inside the property is below what has been set. If you still want the heating on in warmer weather, you may have to twist the stat to raise it to above the warmer room temperature.



Quick-start guide

I

Constant:

Always calling for heat, leaving the radiators to be controlled by the room stat.



Timed:

Will only call for heat on the times you can set with the pins. Put the pins on the outside of the timer at the time you want the heating on.

O

Off:

No heat to the radiators. Only hot water will operate from the taps.

To set the time, turn the outer sections of the timer clockwise until the arrow points to the correct time. **Do not turn it anti-clockwise.** To put the clock back in winter, turn the clock 23 hours clockwise.