

Heating Controls

- Siemens RWB30

Quick-start guide

The Siemens timer allows you to choose between 4 settings to program the heat to the radiators (central heating). This will send power to the Honeywell room stat to bring the central heating on if the stat is set to above room temperature – twist the stat up or down or match the temperature you want



Setting on the Siemens Timer explained

On	Puts the central heating on constantly, allowing the radiators to be controlled by the room stat.
All day	The heating will be on between the orange tab labelled 1 and the blue tab labelled 4. Move the tabs for the times you want.
Twice	The heating comes on at 1 and off at 2, and then on at 3 and off at 4.
Off	The timer doesn't call for heat at all
Override	Override the next tab so the heating can stay on or off for longer as required.
Boost on	Brings the heating on for 1 hour. This can be cancelled by pressing the button again